

# Pro-Alert™ 480 Area of Rescue System




Pro-Alert 480 is an emergency, two-way call system designed specifically to meet the Area of Rescue Assistance communication requirements as defined in the Americans with Disabilities Act. During an emergency, building occupants can use Pro-Alert to call for assistance from a designated Area of Refuge in high-rise buildings and commercial facilities.

Pro-Alert 480 operates over a common Cat-5 bus cable using addressable call stations to conduct hands-free, two-way communication with the on-site master station or off-site with a call center. Installation costs are significantly reduced with Pro-Alert because of its relatively minimal need for conduit, wire and labor. Multiple master stations are also supported as a standard feature.

## FEATURES AND BENEFITS

- CI-cable (circuit integrity cable) compatible
- Cat-5 common bus station cable, no home runs
- Fully supervised with individually addressable components
- Up to 128 stations and 6 masters per main
- Expandable to 512 stations
- Group page
- UL listed power supply
- Simple press of a button for two-way, hands-free communication
- Battery backup
- PBX interface for off-site calling with phone line supervision
- Touchscreen master consoles
- Choice of call stations: vandal-resistant stainless steel with a choice of buttons or plastic station

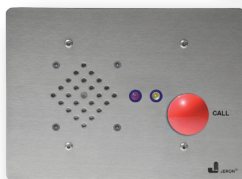

Jeron Electronic Systems, Inc. is an industry leader in developing and manufacturing Nurse Call Systems, ADA-compliant intercom systems, and detention-grade emergency call systems. Founded on the principles of innovative engineering, quality manufacturing, and service-oriented sales support, Jeron has provided superior products to the healthcare, commercial, industrial, institutional, and government markets for more than fifty years.

**For more information, please contact Jeron at 800.621.1903 or [jeron.com/life-safety](http://jeron.com/life-safety)**



7501 N. Natchez Ave. • Niles, IL 60714 • 773-275-1900 • Fax: 773-275-0283 • [www.jeron.com](http://www.jeron.com) • [sales@jeron.com](mailto:sales@jeron.com)

Copyright © 2019 Jeron Electronic Systems, Inc.

